


NetComm NB6Plus4W_Rev2_AU Firmware Upgrade Instructions

1. Using your web browser (Internet Explorer, Mozilla Firefox, etc.), enter the IP address of your NetComm router into the Address Bar. The default address is <http://192.168.1.1>.
2. Log on using your administrative user name and password. The default is **admin** and **admin**.
3. Click on **Management** at the top, and then **Update Firmware** on the left.

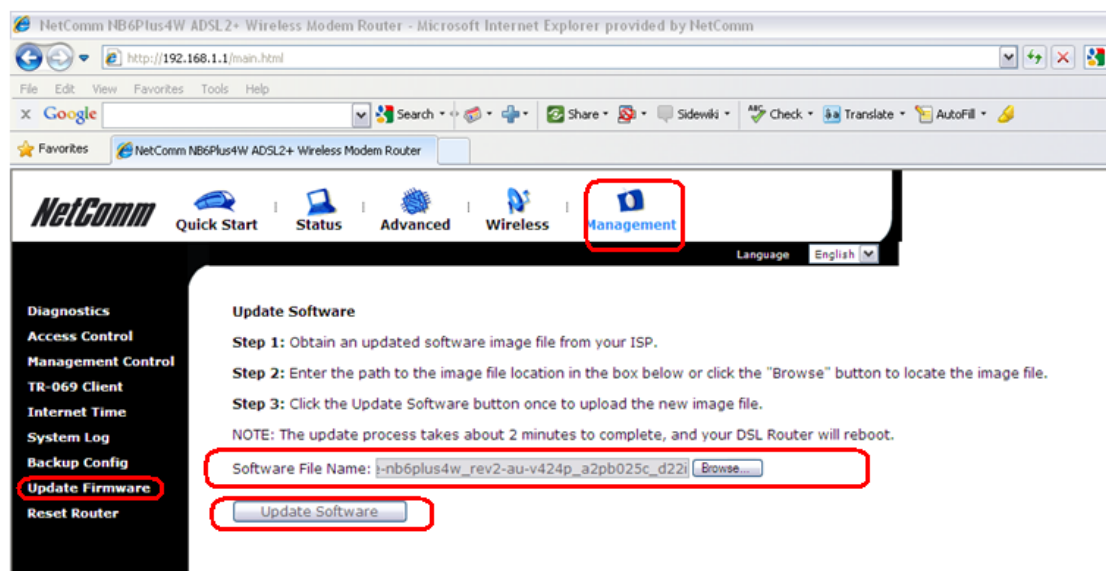

Use the **Browse** button to locate the firmware image file.

4. After selecting the firmware image file named **cfe-nb6plus4w_rev2-au-v424p_a2pb025c_d22i**, click **Update Firmware**, and wait for the process to complete. The upgrade process may take approximately 1-2 minutes, the modem will automatically reboot after firmware upgrade. You will expect 'Power', 'WLAN' and your connected 'Ethernet' port's LED light = **green** after firmware upgrade completed if the modem is not connected to an active ISP service line.

NOTE: DO NOT DISCONNECT YOUR PC FROM THE MODEM or POWER THE NB6PLUS4W_REV2 OFF DURING FIRMWARE UPGRADE.

5. Your NB6Plus4W REV2 firmware upgrade is now completed. The version number is now shown on the button left hand side of the web management interface.

NetComm NB6Plus4W ADSL2+ Wireless Modem Router - Microsoft Internet Explorer provided by NetComm

http://192.168.1.1/main.html

File Edit View Favorites Tools Help

Google Search Share Sidewiki Check Translate Au

Favorites NetComm NB6Plus4W ADSL2+ Wireless Modem Router

NetComm

Quick Start

Status

Advanced

Wireless

Management

Language English

Connect to Internet
Quick Setup

Connect to Internet

Your DSL router is **not ready to connect** to Broadband.
Status: Down

Enter your Broadband user name and password, then click .

Internet Connection	pppoe_0_8_35
Total Online Time:	0 secs
Broadband User Name	<input type="text"/>
Password	<input type="password"/>

Firmware: 4.24p
DSL: A2p8025c.d22i
Wireless: 5.10.120.0